


MACH LITE™

Component List:	QTY
Flag and flag pole	1
Chain assembly	1
Basket assembly	1
Assembly pin	1
Folding portable base	1
Carrying bag	1

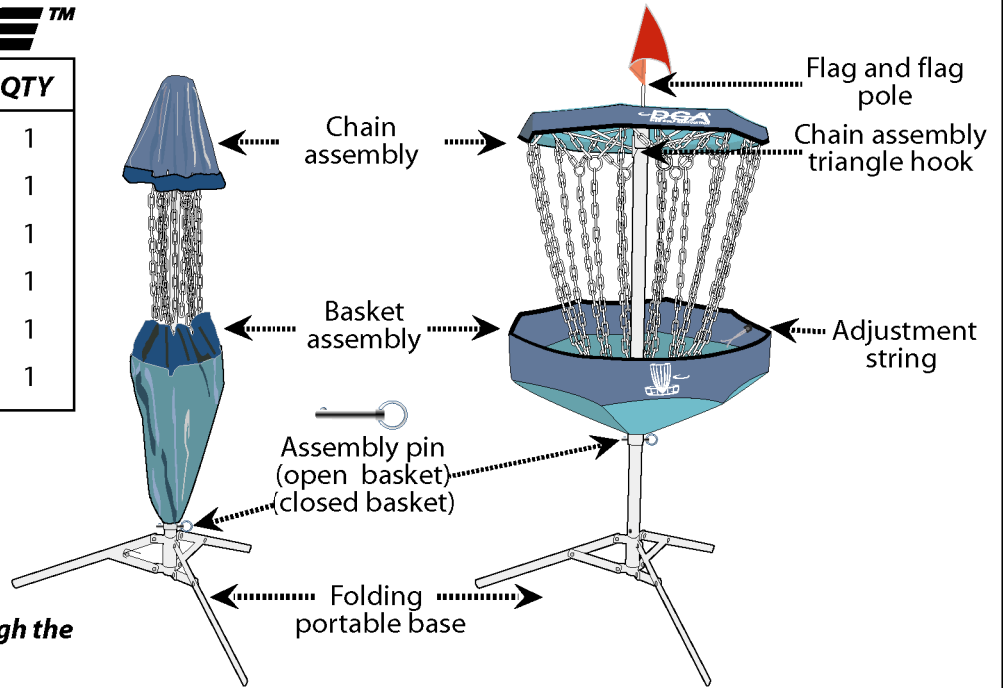

IMPORTANT: Please read through the assembly instructions prior to assembling.

Assembly instructions:

1) Insert chain assembly into the basket assembly making sure to align the spring loaded button and hole on the two attached pole assemblies. Make sure chain is not tangled. Press spring loaded button down and slide pole down until the button locks. **(Be careful not to pinch fingers when fitting parts together).**

2) Open and position the folding portable base on level ground making sure to align the spring loaded button on the pole with the hole in the portable base. Press spring loaded button down and insert the assembled chain holder, basket and pole assemblies into the folding portable base until the spring loaded button locks.

3) To open the basket for play, pull the assembly pin apart from the basket's closed position. Push the bottom of the basket up the pole aligning the basket collar assembly through-hole with the poles top through-hole. Push the assembly pin through the aligned through-holes to create a locked fit. Pull basket adjustment string to make basket rim rigid.

To close the basket, reverse these steps. With the basket closed and the assembly pin placed through the aligned through-holes, the basket stays closed even when the Mach Lite™ is transported without the included bag.

4) To open the chain assembly, push up on the chain assembly's movable collar like and umbrella until the triangle hook engages. To close the chain assembly, reverse this step.

5) To use carrying bag collapse the chain holder and basket, making sure assembly pin is secure in the baskets closed position as described in the above instructions. Slide the carrying bag over the collapsed Mach Lite™. Turn the bagged Mach Lite™ over and remove base. Store folding portable base in the carrying bags side pouch and secure the base in the pouch by pulling Velcro belt tight.

If you need to speak to a DGA® representative for what ever reason, please call, fax, or e-mail.

Please visit our website for more products and information on the sport of Disc Golf.

Phone: 831-722-6037; Fax: 831-722-8176; e-mail: info@discgolfassoc.com; Web site :www.discgolfassoc.com.



Congratulations on your purchase of a Mach Lite Portable Disc Pole Hole™. We thank you for your purchase and we hope you have many years of fun and enjoyment from your DGA® Mach Lite.

DGA® Warranty:

Your DGA® Mach Lite Disc Pole Hole™ warranty covers failure due to manufacturing defects under normal conditions and use for one year from the date of purchase.

Please take the time to fill out your warranty registration card. The completed warranty card must be returned to us, with a copy of the sales receipt for the warranty to take effect. This warranty is extended to the original owner only and is not transferable.

The Mach Lite Disc Pole Hole™ is designed for home use and is not manufactured for permanent or extended placement outdoors. This warranty does not include misuse, neglect, or accident, or unauthorized repairs and alterations. Extended placement outdoors can result in premature failure do to weathering from sun, rain, snow and wind.

Important:

Please register you product within 10 days of purchase.

Contact:

If you need to speak to a DGA® representative for what ever reason, please call, fax, email or visit our website. Phone: 831-722-6037; Fax: 831-722-8176; email: info@discgolfassoc.com; www.discgolfassoc.com

Warranty registration and privacy notice:

Please take the time to fill out your warranty registration card and mail it back to DGA. We respect your privacy and we will not share your information.

NAME: _____

ADDRESS: _____

MODEL: _____

PURCHASE DATE: _____

NAME OF DEALER: _____

ADDITIONAL COMMENTS: